

# Phrozen Resin User Guide


## Neon Resin - Peach / Lime / Pumpkin / Lemon

### Outline

Before printing the perfect object, it is important to first understand the material limitations we are handling and how it can be successfully printed under various conditions. With this in mind, Phrozen provides the following design suggestions to help you better understand the properties of each material and how you can best utilize them to bring your wildest creation to life.

### Table of Contents

<b>TDS.....</b>	<b>1</b>
<b>Printing.....</b>	<b>2</b>
<b>Printing Parameters.....</b>	<b>2</b>
Cleaning.....	5
Post-Curing.....	5
<b>Design Specifications.....</b>	<b>6</b>
<b>Applications.....</b>	<b>10</b>

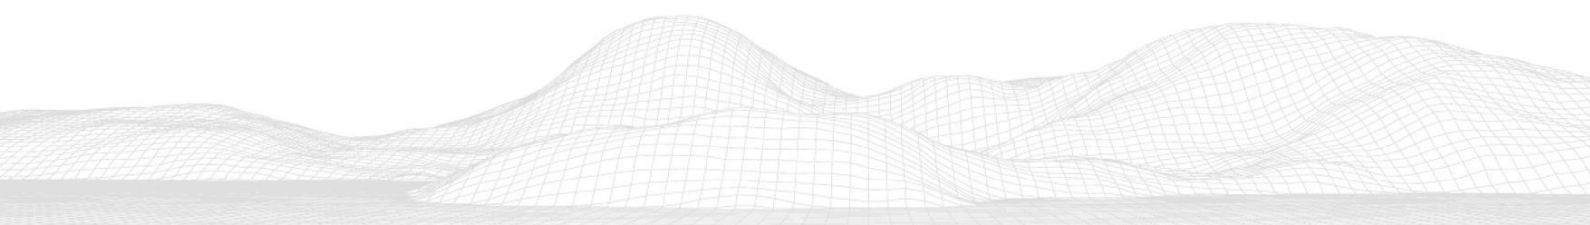

## Section 1

# TDS

<b>General Properties</b>	<b>Norm</b>	<b>Typical Values</b>
Appearance	-	Pink, Green, Yellow, Orange
Viscosity, 30	Cone/Plate Rheometer <sup>1</sup>	200–350 mPas
Density (liquid resin)	ASTM D4052-18a	1.1–1.15 g/cm <sup>3</sup>
<b>Tensile Properties</b>	<b>Norm</b>	<b>Typical values (UV post-cured)</b>
E Modulus	ASTM D638	800–1150 MPa
Ultimate Tensile Strength	ASTM D638	19–23 MPa
Elongation at Break	ASTM D638	3–12 %
<b>Impact Properties</b>	<b>Norm</b>	<b>Typical values (UV post-cured)</b>
Notched Izod (Machined), 23 °C	ASTM D256	40.51–47.98 J/m
<b>Thermal Properties</b>	<b>Norm</b>	<b>Typical values (UV post-cured)</b>
HDT at 0.45 MPa	ASTM D648	70 °C
<b>Hardness</b>	<b>Norm</b>	<b>Typical values (UV post-cured)</b>
Shore D	ASTM D2240	72–82

*\* All testing specimens are printed using Phrozen Sonic Mighty 8K or Sonic Mini 8K, and post-cured using Phrozen Cure & Wash.*

Specimens are printed unless stated otherwise. The information in this TDS, including product recommendations, is based on our current knowledge and experience. Descriptions, drawings, photographs, data, proportions, weights, etc. provided may change without notice and do not establish the product's contractual quality. Request the relevant MSDS from your supplier or contact Phrozen Tech Co., Ltd at [sales@phrozen3d.com](mailto:sales@phrozen3d.com)

## Section 2

# Printing

## Printing Parameters

<b>Printer</b>	Sonic Mini / Sonic Mini 4K
<b>Layer Height</b>	50 $\mu\text{m}$
<b>Exposure Time</b>	2.0–3.0 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Light-off Delay</b>	12 s
<b>Lift Distance</b>	6 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mini 8K
<b>Layer Height</b>	50 $\mu\text{m}$
<b>Exposure Time</b>	2.5–3.5 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Rest Time After Retract</b>	3 s
<b>Lift Distance</b>	6 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mini 8K S
<b>Layer Height</b>	50 $\mu\text{m}$
<b>Exposure Time</b>	1.5–2.5 s
<b>Bottom Exposure Time</b>	15–20 s
<b>Rest Time After Retract</b>	3 s

<b>Lift Distance</b>	6 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mighty 4K
<b>Layer Height</b>	50 $\mu$ m
<b>Exposure Time</b>	2.5–3.5 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Light-off Delay</b>	11 s
<b>Lift Distance</b>	8 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mighty 8K
<b>Layer Height</b>	50 $\mu$ m
<b>Exposure Time</b>	2.5–3.5 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Rest Time After Retract</b>	3 s
<b>Lift Distance</b>	8 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mighty 12K (Upgrade Kit)
<b>Layer Height</b>	50 $\mu$ m
<b>Exposure Time</b>	2.5–3.5 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Rest Time After Retract</b>	3 s
<b>Lift Distance</b>	8 mm
<b>Lifting Speed</b>	60 mm/min

<b>Printer</b>	Sonic Mega 8K
<b>Layer Height</b>	50 $\mu\text{m}$
<b>Exposure Time</b>	3–4 s
<b>Bottom Exposure Time</b>	20–25 s
<b>Rest Time After Retract</b>	4 s
<b>Lift Distance</b>	8 mm
<b>Lifting Speed</b>	45 mm/min

<b>Printer</b>	Sonic Mega 8K S
<b>Layer Height</b>	50 $\mu\text{m}$
<b>Exposure Time</b>	1.5–2.5 s
<b>Bottom Exposure Time</b>	10–15 s
<b>Rest Time After Retract</b>	4 s
<b>Lift Distance</b>	8 mm
<b>Lifting Speed</b>	60 mm/min

- ★ Since Sonic Mega 8K has a higher peeling force, a longer exposure time is necessary to increase the success rate.
- ★ Make sure to keep the acrylic cover on when printing for the best printing environment.

## Cleaning

1. After removing the printed object from the building stage, use the Phrozen Wash and Cure Kit for post-processing.
2. Soak the object in the Washing Station filled with 95% alcohol for 45–60 seconds to remove uncured resin from the surface. **Do not soak models in alcohol or other solvent (such as IPA) for more than 60 seconds, as it may damage the surfaces.**
3. Make sure to clean the inner parts of hollow objects completely.
4. After the object has been thoroughly cleaned, leave it in a cool, well-ventilated place for at least 30 minutes without exposure to light. Alternatively, you may gently apply compressed air to dry the printed object.

**\*When printing flat on the building plate, remove the printed objects carefully to avoid deformation on the objects.**

## Post-Curing

1. Use Phrozen post-curing lamps (Phrozen Cure & Wash/Phrozen Cure/Phrozen Mega S) or other post-curing lamps with the same wavelength to cure printed objects.
2. Cure the printed objects for 30 minutes for the best results.

## Section 3


# Design Specifications

※Note: All indicators are limited to each resin; the value will vary with different machines and environmental conditions.※

### Minimum Unsupported Wall Thickness

This indicator shows the minimum wall thickness that can be printed independently with no support without causing any bending or breaking.


Recommended thickness:  $\geq 0.2$  mm

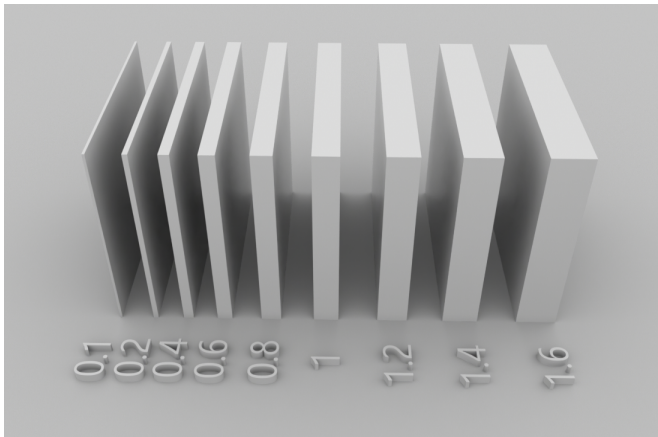

### Size Tolerance, X-Y plane

This indicator shows the minimum dimensional tolerance between the hole and the column parallel to the XY plane.


Recommended tolerance:  $\geq 0.1$  mm

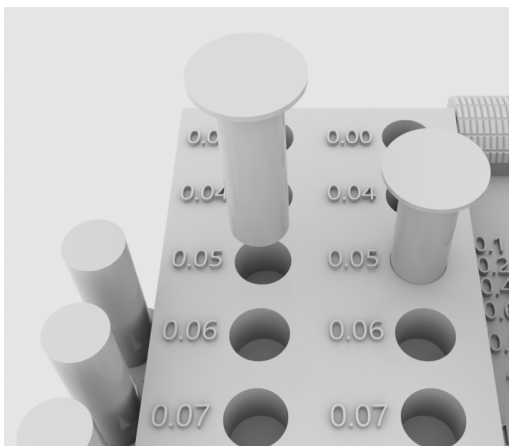

## Minimum Pin Diameter

This indicator shows the minimum column diameter of pillars and supports that can be printed independently without bending or breaking.


*Recommended diameter:*  $\geq 0.3$  mm

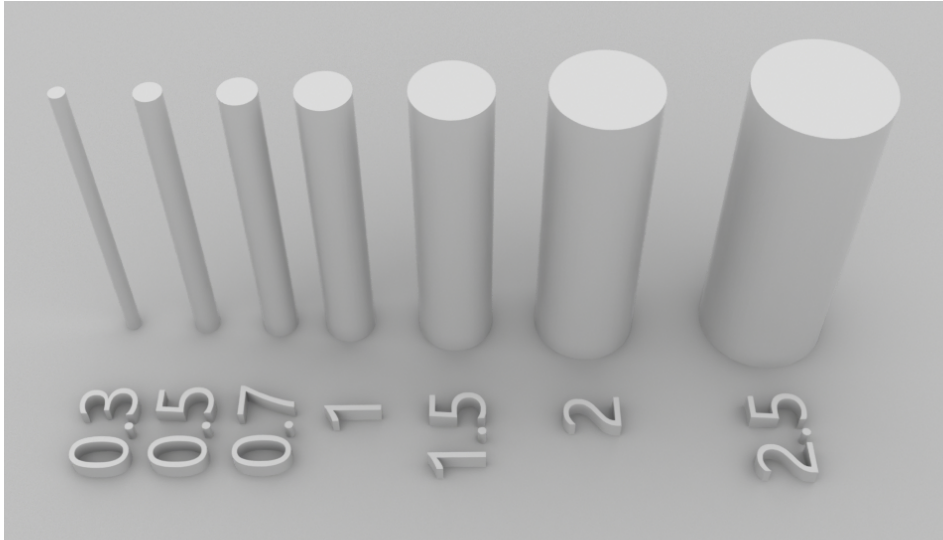

## Minimum Hole Diameter, X-Y plane

This indicator shows the minimum hole diameter that can be successfully printed parallel to the XY plane.

*Recommended diameter:*  $\geq 0.7$  mm

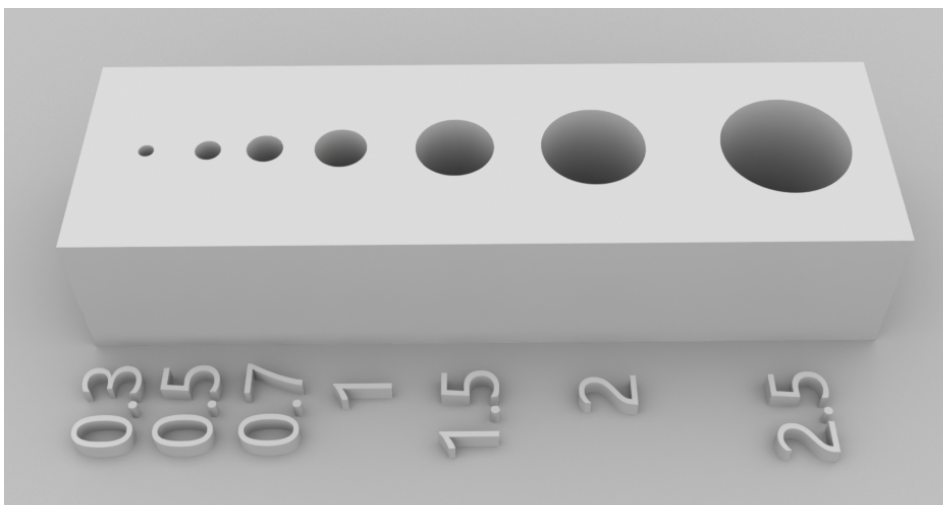



## Minimum Embossed Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with embossed details.


*Recommended width: 0.08 mm*



## Minimum Engraved Detail Width, X-Y plane

This indicator shows the minimum line width that can successfully be printed with engraved details.


*Recommended width:  $\geq 0.3$  mm*

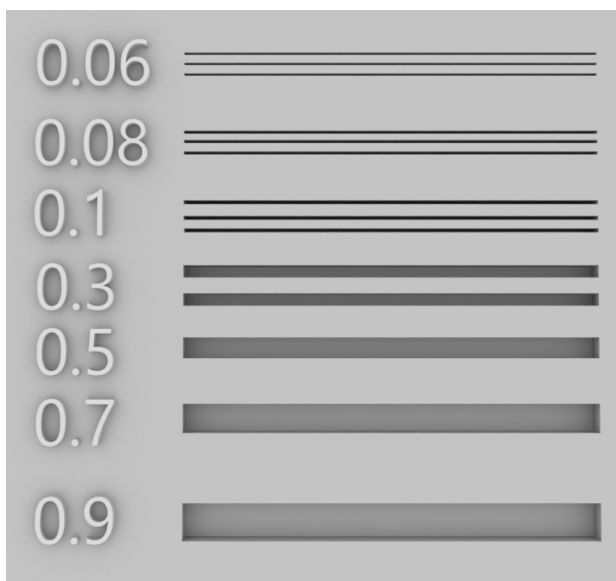

## Maximum Horizontal Bridge Span

This indicator shows the maximum width between the supporting walls that can be printed without deforming the bridge.

*Recommended width:*  $\leq 6$  mm

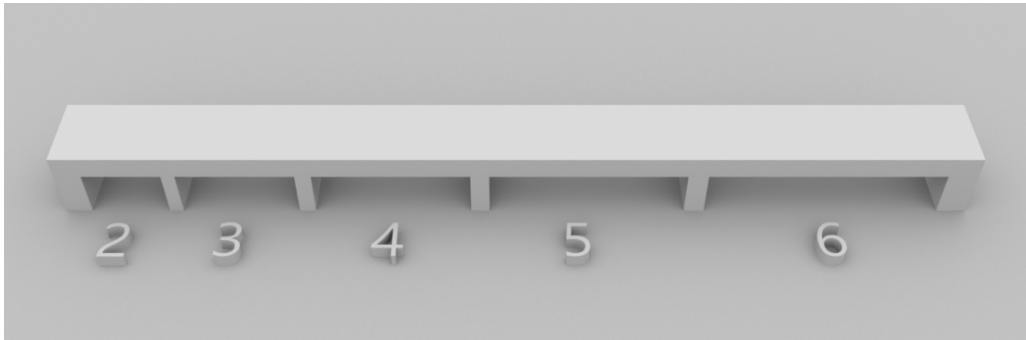


## Minimum Hole Diameter and Engraved Detail Width, Z-Axis, at 0.05mm Layer Height

This indicator shows the minimum hole diameter and engraving groove width that can be successfully printed on the Z-axis with a layer thickness of 0.05 mm.

*Recommended diameter:*  $\geq 0.7$  mm

*Recommended width:*  $\geq 0.06$  mm

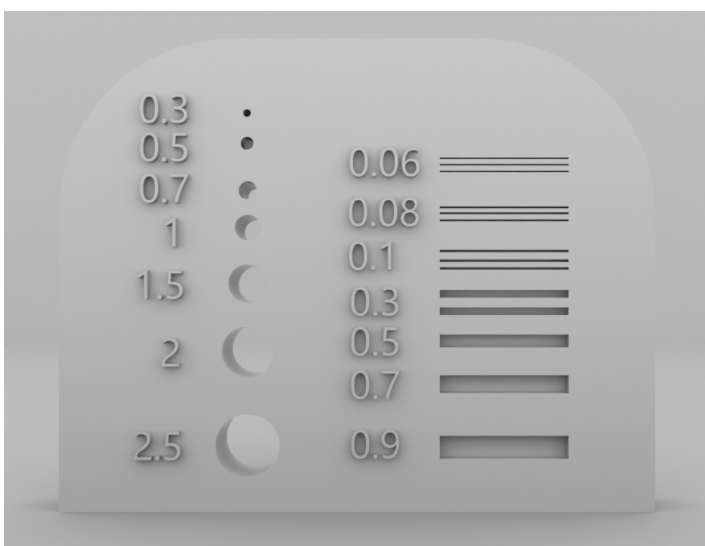

## Section 4

# Applications

